

Autrol Field Indicator



MODEL
AI-100

- Multi-programable unit selection
- Easy calibration
- Easy button configuration
- Programmable user define unit

Duon System Co.,Ltd.
www.autrol.com

AI-100

Autrol Field Indicator Overview

Autrol Field Indicator, Model AI-100, is an Indicator for converting and displaying received 4 to 20 mA current input to setting range.

The Indicator is available to indicate 5 digit numbers, 6 digit letters and 4 type special symbols on LCD.

It has main functions such as Displaying 4 to 20mA current , Easy Configuration, Changing Square Root function and User Define Units.

AI-100 does not need separated power and it operates loop-powered 4 to 20mA.

The minimum operating current is 3.6 mA and maximum operating voltage is 2 Vdc.


User define function, E-Unit (Engineering Unit), can modify the unit letters that user wants to indicate on LCD as well as basic selectable units.



Features

- » Intuitive & Logical Interface
- » 4 ~ 20mA Loop Power
- » LCD Display
- » Low Voltage Drop
- » User Interface (2 Button)
- » Flexible Wide Range. (-99999 to 99999)
- » Easy Calibration
- » User Define Units, Modified Various Units

Dimension

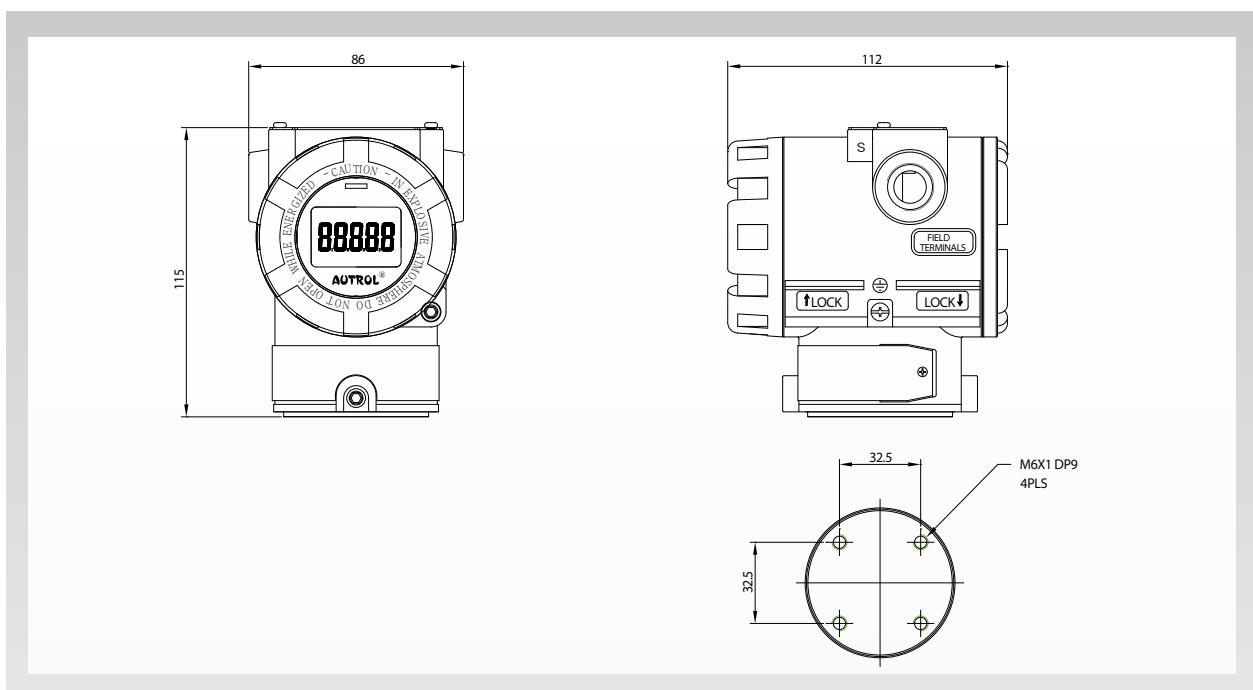

Applications

- » Remote Monitoring with 4~20mA input
- » Chemical, Steel, Paper, Thermal
- » Oil & Gas
- » Petro-chemical, Water treatment plants
- » Connect with all Autrol series for APT3100, APT3200, ATT2100, ALT6100 series.



Autrol Field Indicator

Technical Specifications

Range

- » Input Signal Range
 - 4 to 20 mA nominal

- » Operating Range
 - 3.4 to 24 mA

Maximum overload Current

- 100mA

Voltage drop

- 1.5Vdc Typical, 2.0 Vdc Maximum

Indication range

- -99999 ~ 99999
5 digit + 1 Sign(-)
7-segment characters.

Temperature Limits

- » Storage
 - -40 to +85°C (-40 to +185°F)

- » Operating
 - -20 to +70°C (-4 to +158°F)

Relative humidity

- 100%RH

Update time

- Sensor Update Time 0.75 sec
- Display Update Time 1.5 sec

Resolution

- ± 0.02%

Accuracy

- ±0.2% of Calibrated span(16mA)

Define Unit


Num	Display_Unit	Num	Display_Unit
01	%	21	ft ³ /m
02	mA	22	Gal/m
03	V	23	l/m
04	Ohm	24	lGal/m
05	cnt	25	m ³ /h
06	lnHzO	26	Gal/S
07	lnHg	27	MGal/d
08	FtHzO	28	l/S
09	mmHzO	29	MI/d
10	mmHg	30	ft ³ /S
11	PSI	31	ft ³ /d
12	BAR	32	m ³ /S
13	mBAR	33	m ³ /d
14	g/cm ²	34	lGal/h
15	Kg/cm ²	35	lGal/d
16	PA	36	°C
17	KPA	37	°F
18	MPA	38	°R
19	TORR	39	K
20	ATM	40	NONE

Ordering Information

ITEM	Code	Description
Electrical Connection	1	1/2 - 14 NPT
	2	G1/2 (Adapter)
	X	Special
Harzard Location Certification	K0	Maker Standard (IP67)
	K1	Korea Approval (KC) Flameproof
	K2*	Korea Approval (KC) Intrinsic Safety
	E1*	ATEX Flameproof
	E2*	ATEX Intrinsic Safety
	F1*	FM Flameproof
	F2*	FM Intrinsic Safety
Units	□ □	01 ~ 40 (Refer. to "Define Units")
Options	ST	Stainless steel Housing
	BA	Stainless steel bracket (Angle type) with SUS Bolt & Nuts
	BF	Stainless steel bracket (Flat type) with SUS Bolt & Nuts

Note : "*" before order.

Menu Configurations

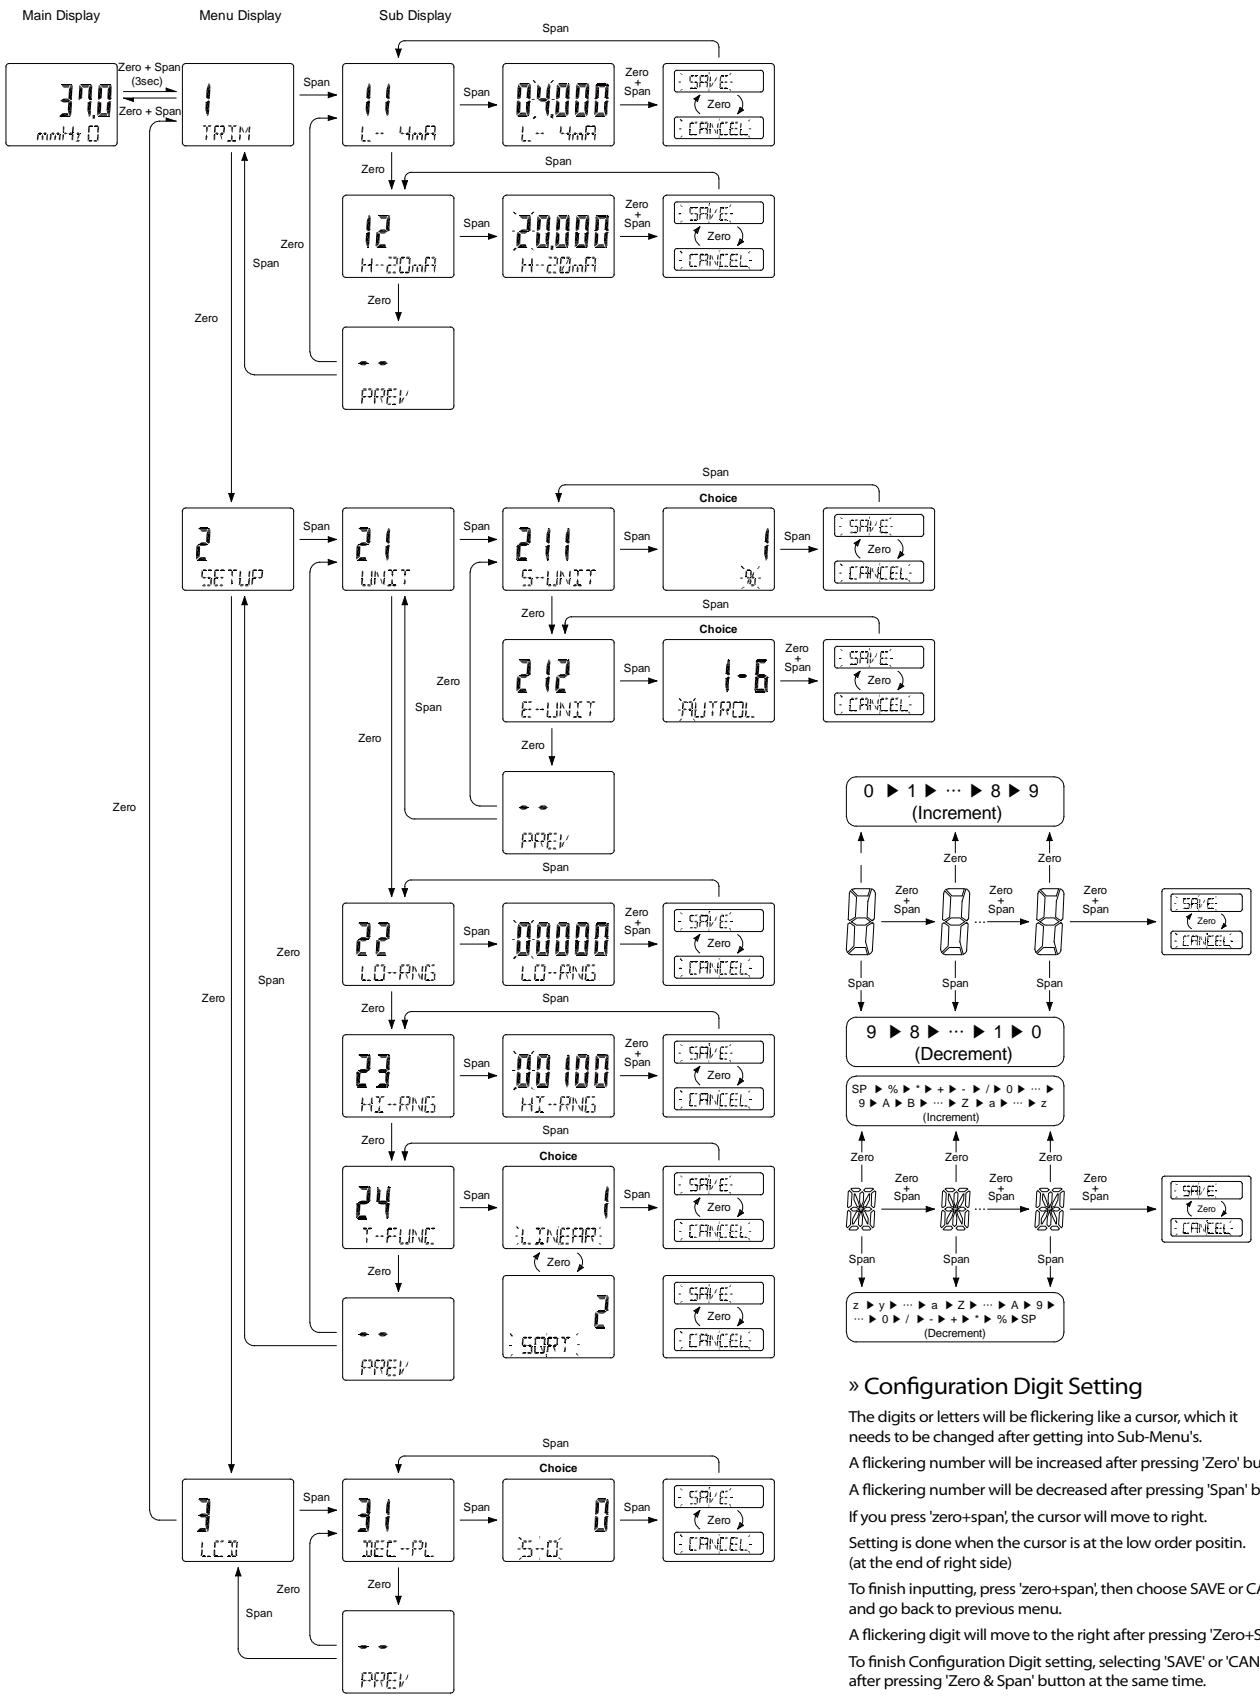

» Configuration Digit Setting

The digits or letters will be flickering like a cursor, which it needs to be changed after getting into Sub-Menu's.

A flickering number will be increased after pressing 'Zero' button.

A flickering number will be decreased after pressing 'Span' button.

If you press 'zero+span', the cursor will move to right.

Setting is done when the cursor is at the low order positin.
(at the end of right side)

To finish inputting, press 'zero+span', then choose SAVE or CANCEL and go back to previous menu.


A flickering digit will move to the right after pressing 'Zero+Span'.

To finish Configuration Digit setting, selecting 'SAVE' or 'CANCEL' after pressing 'Zero & Span' button at the same time.


And then go back to previous menu.

□ Electrical Connections


APT3500

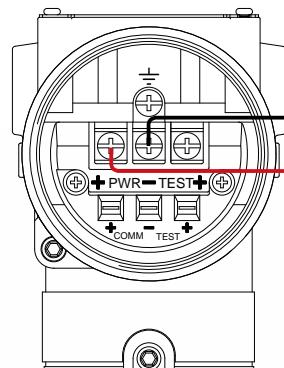


AI-100

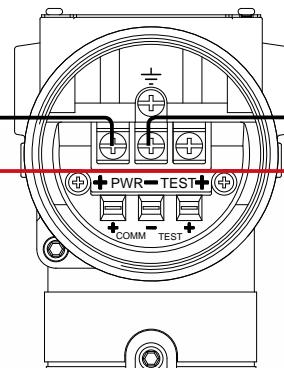


Power Supply

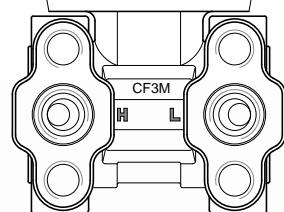

AI-100

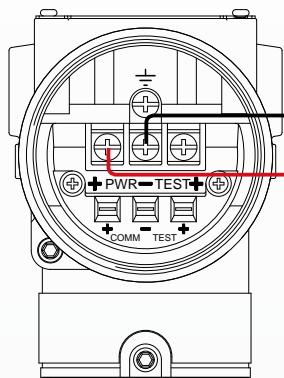

APT3500

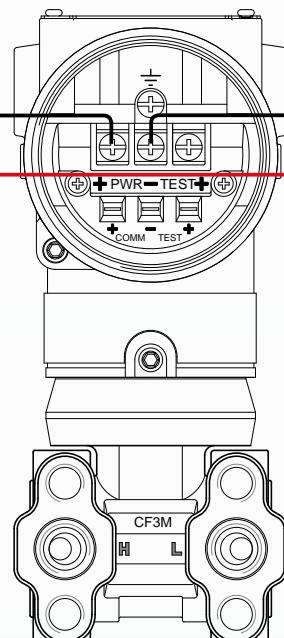


Power Supply


Dimensions of Transmitter (mm)

Vertical Mounting Type 2"Pipe Mounting Bracket

AUTROL®

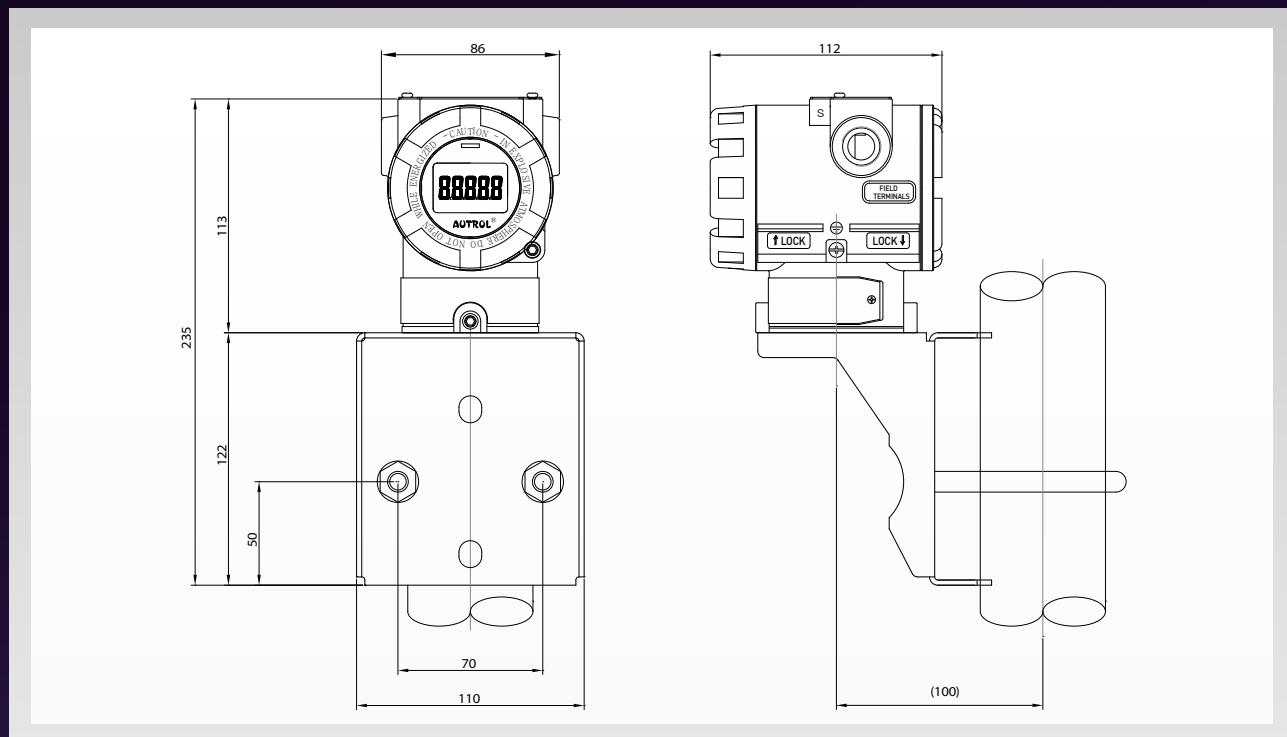

Horizontal Mounting Type 2"Pipe Mounting Bracket

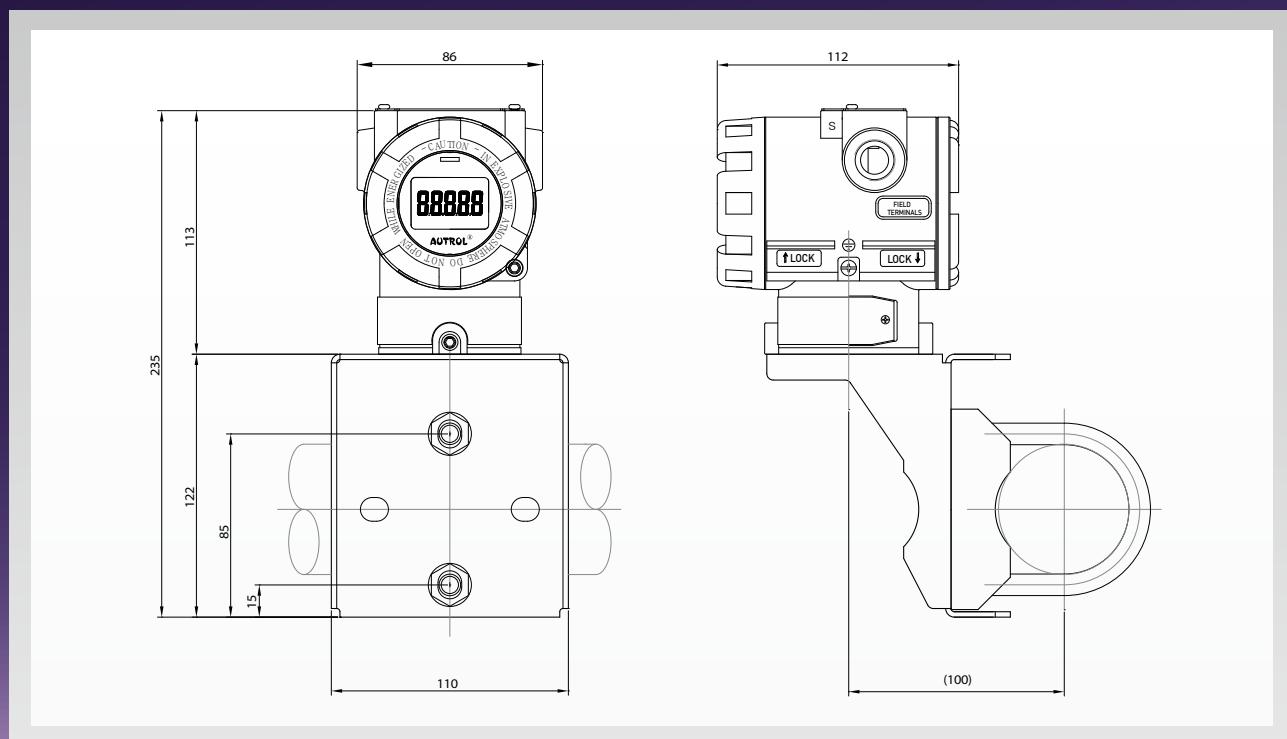

Copyright © Duon-System Co., Ltd. Jul. 2016

Duon System Co.,Ltd.

298-29, GONDAN-RO, GUNPO-SI, GYEONGGI-DO, KOREA 15809
Tel : +82-31-389-6100 Fax : +82-31-429-7200 Web : www.autrol.com